

## UNDER RAIL WOODLINER INSTALL INSTRUCTIONS

### PARTS INCLUDED:

- (1) LARGE FLOOR SECTION
- (1) SMALL FLOOR SECTION
- (1) LEFT HAND SIDE (BOOT INSTALLED)
- (1) RIGHT HAND SIDE (BOOT INSTALLED)
- (1) TAILGATE PIECE
- (1) BULKHEAD PIECE
- FILLER PIECES (DEPENDING ON LINER)


### TOOLS REQUIRED:

- DRILL OR DRIVER SET
- #2 ROBERTSON DRIVER BIT

### INSTALL INSTRUCTIONS:

- DISASSEMBLE PACKAGED LINER
- PUT IN BULKHEAD PIECE FIRST
- PUT IN BOTH SIDE PIECES PUSHING UP AND IN AT THE BOTTOM AS FAR AS POSSIBLE
- PUT THE FLOOR PIECES IN, LIFT UP THE CENTERS OF THE FLOOR ALIGNING THE TONGUE AND GROOVE
- THEN SLOWLY STEP ON THE MIDDLE TO MAKE IT GO DOWN, SOME CREAKING IS NORMAL
- STEP ON ALL (4) CORNERS TO SET LINER FULLY, THEN DRILL IN SCREWS

### DIAGRAM FOR SCREW LOCATIONS:

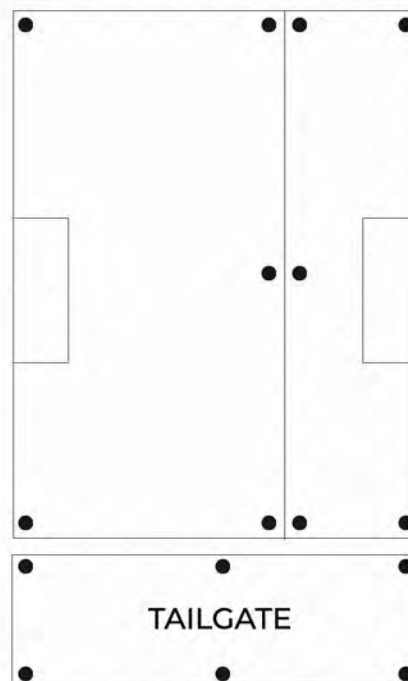

**\*INSTALLER NOTE\***  
WOOD LINER MAY NEED TO BE  
MINORLY ADJUSTED TO FIT PROPERLY

**PART # ACBAGFORD12**  
**STAINLESS STEEL SCREWS**  
**20 X 1 3/4"**